
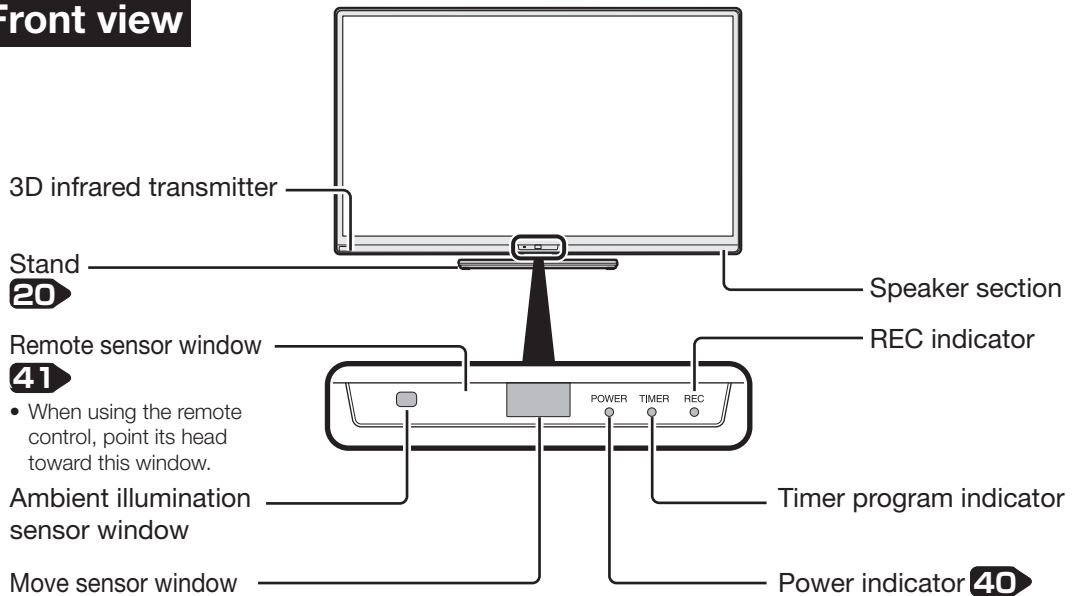


English Guide

Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view




Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Right side view

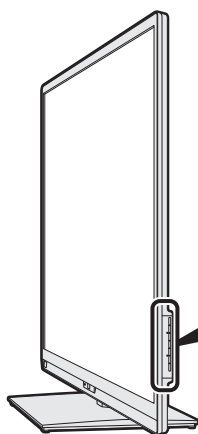


Control panel

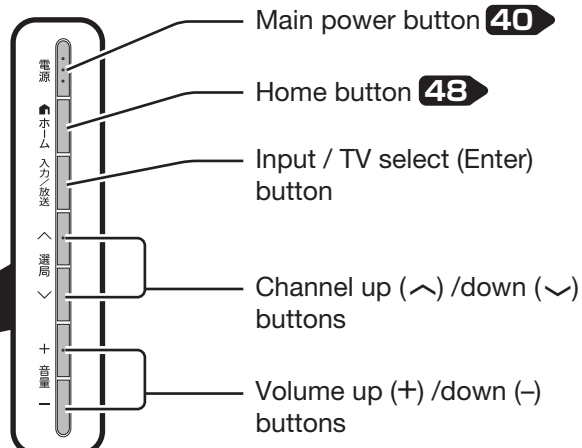

Back view

The illustrations below are those of LC-60G7.

LC-52G7/LC-46G7/LC-40G7 has the same layout of jacks and terminals as LC-60G7.

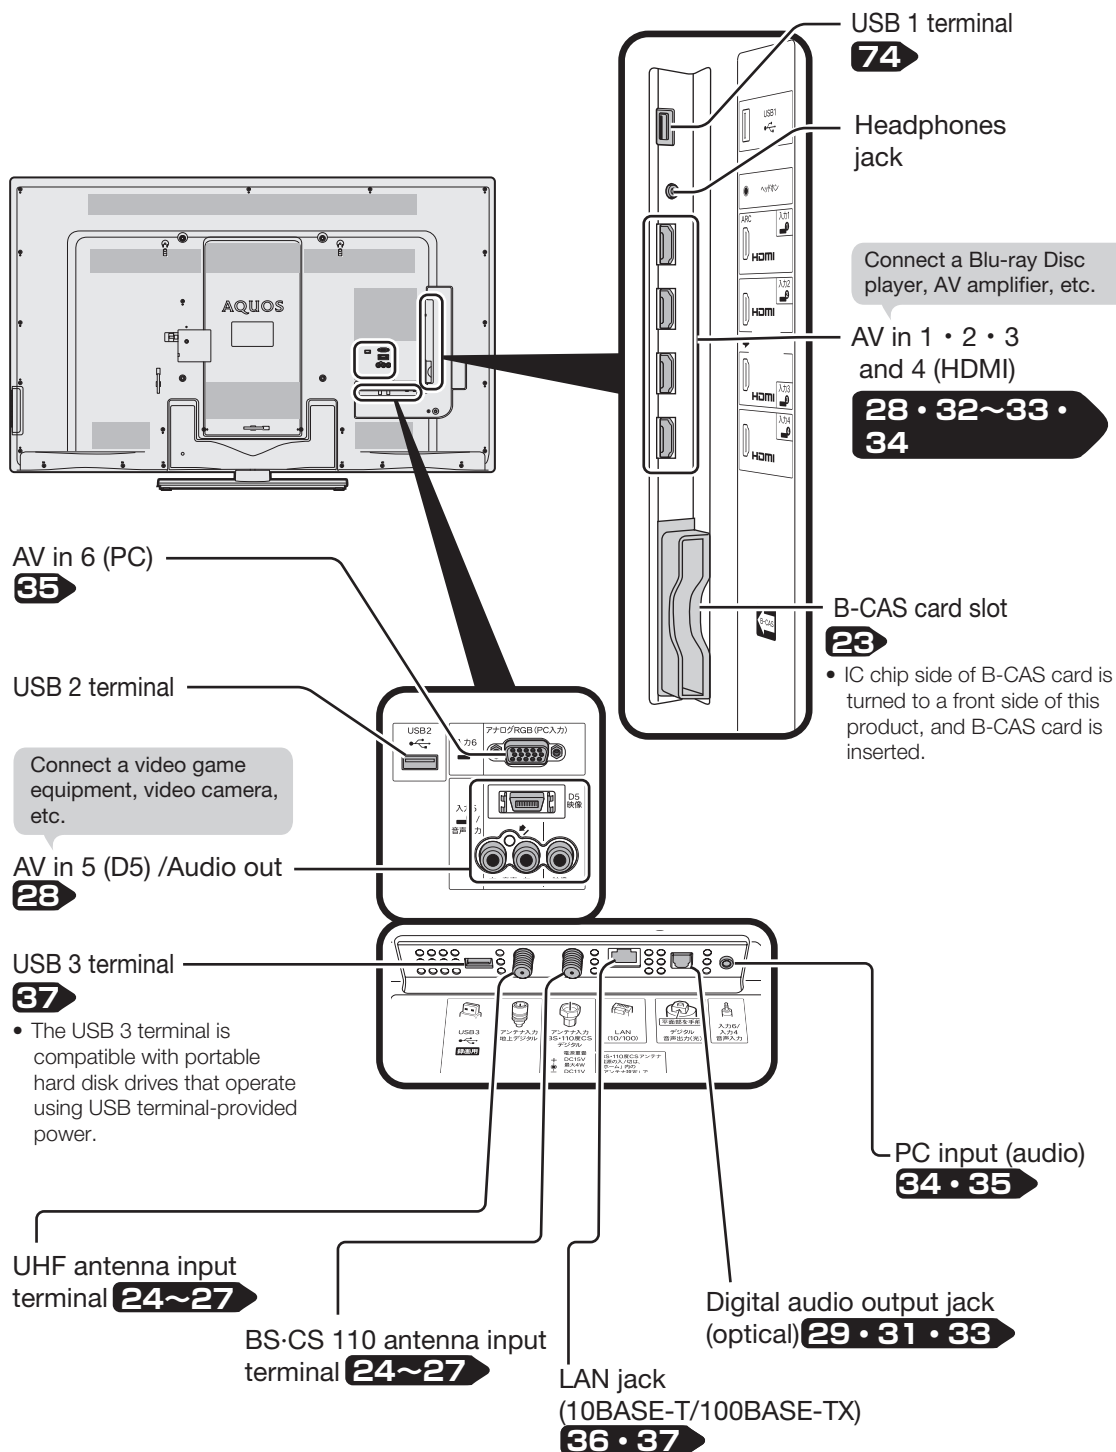

Remote Control Unit

Active/Standby 40

Press to engage the TV set in the active or standby mode.

地上D Terrestrial digital select 47

BS BS select 47

CS CS select 47

When selecting the CS digital channel for the first time. 46

データ連動

d Linked data broadcast 47

Press to call the data broadcast linked with the current digital TV program.

Mute 47

Press to mute audio.

+ Volume up (+)/down (-) 47

Press to adjust the volume.

番組表(予約) EPG 47

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

(インターネット)

ホーム Display the "Home" Screen 48・49

Press to start some useful operations of the TV.

番組情報

Program info

Press to display detailed information on the current digital program.

Finish

Press to finish menu operation, etc.

Familink

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

録画消去

Delete recording

Press to delete a title recorded on the USB-HDD.

2画面

Split screen

Press to switch between the split screen mode and the normal screen mode.

操作切換

Operable screen

Press to switch the operable screen when the TV set is in the split screen mode.

静止

Freeze

Press to freeze the picture.

オフタイマー

Sleep timer

Press to select the remaining time period after which the TV set automatically enters the standby mode.

AVポジション

AV mode select

Press to select the picture/sound setting that best matches the current program.

映像切換

Picture select

Press to select the desired picture when watching a digital multi-picture program.

画面表示

Display

Press to display or turn off the channel call, etc.

3D

3D

Press to switch to 3D mode when the TV set receives a 3D signal.

セーブモード

Power saving mode

Select power saving settings.

お知らせ

Information

Press to display AQUOS information.

Channel select 47

- Press to select a channel.
- Use to input a number for various settings.

3桁入力

Digital channel number input

Use to select a digital channel by entering the 3-digit channel number.

入局

Channel up (^)/down (v) 47

Press to select channels in the ascending or descending order.

入力切換

Input select 47

Press to select the input.

Display the Tool Menu

Cursor (up, down, left, right) 48・49

Use to select a menu item, column, etc.

Enter/Confirm 48・49

Press to confirm a selected setting or menu item.

Return 49

Press to go back to the previous screen.

青

赤

緑

黄

Color

Use to operate EPGs and data program screens.

Other on-air programs

Press to display the EPG for currently on-air programs only(裏番組).

Q検索

Smart search

Press to display the Smart search.

音声切換

Audio select

Press to select the audio.

取扱説明

Operation guide 50

(操作ガイド)

Press to display the operation guide.

字幕

Caption

Press to display, select, or turn off captions when watching a digital program with captions.

メニュー

Menu

Press to display or turn off the menu screen.

To open the cover

Hold the cover by the projections on both sides and lift upwards.

Switching the Display Language to English 設定メニューなどの言語を英語にする


- Using the menu screen, you can switch the on-screen display language to English.

設定メニューなどの画面表示を英語にすることができます。



◇ おしらせ ◇

誤って設定メニューを英語にしてしまったときは

- 設定メニューの「 (View Setting)」-「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press



Display the menu screen.

設定メニューを表示する

2

Select with



Select “ (視聴準備)” (View Setting).

「 (視聴準備)」を選ぶ



3

Select with



and press



Select “Language(言語)”.
「Language(言語)」を選ぶ

4

Select with



and press



Select “English”.
「English」を選ぶ

Enter.

決定する



- The menu screen is now displayed in English.

- 画面表示が英語になります

5

Press



Finish this operation.
終了する